

SET-UP INSTRUCTIONS



Tie a knot in the end of your anchor rope leaving a tail approximately 12 inches long



Feed that tail down into the bag and View inside bag through the grommet



Tie a knot on the outside of the bag. Your anchor rope is now tied into your bag.



Pile the rope into the bag, coiling the rope will tend to cause tangles.

Roll Down top to help keep bag open.



Filled Bag.

5. Set up your anchor and anchor puller on the rope as you normally would.

USING YOUR DROPIN' OUT ANCHOR ROPE BAG

Anchor as you normally would.



Anchor has been deployed. Line is tied off to the cleat at bow.



Pull a little extra rope out of the bag. Wrap the cleat as you would wrap a cleat on the side of your boat.



VERY IMPORTANT: Finish with a half hitch over the cleat.



Finished tie off



Close the bag by crossing the buckles



Attach a small buoy to the D-ring below the cleat. This will mark your bag and reduce the chance of running over it.

7. When you need to drop out, untie your line from the bow and toss the bag and small buoy over board.

8. Now you are ready to fish

9. When you are finished for the day, remember to untie the cleat before you refill your bag.

IMPORTANT SET-UP AND USE INSTRUCTIONS

Chinook Outdoor Gear TM
Dropin' Out Anchor Rope Bag TM

Set-up Instructions

1. Tie a knot in the end of your Anchor Rope leaving a tail approximately 12 inches long.
2. Feed that tail down into the bag and through the grommet.
3. Tie a knot on the outside of the bag in the above tail. Your anchor rope is now tied into your bag.
4. Pile the rope into the bag, coiling the rope will tend to cause tangles.
5. Set up your anchor and anchor puller on the rope as you normally would.

Use of your Dropin' Out Anchor Rope Bag

1. Anchor as you normally would.
2. After your anchor is set and tied off at the bow, pull a little extra rope out of the bag. Wrap the cleat as you would wrap a cleat on the side of your boat.
3. VERY IMPORTANT: Finish with a half hitch over the cleat.
4. Close the bag by crossing the buckles.
5. Attach a small buoy to the D-ring below the cleat. This will mark your bag and reduce the chance of running over it.
6. Now you are ready to fish.
7. When you need to drop out, untie your line from the bow and toss the bag and small buoy over board.
8. When you are finished for the day, remember to untie the cleat before you refill your bag.

Always wear a life jacket when anchoring
Use This Product At Your Own Risk

WARNINGS AND SAFETY RULES

1. READ AND UNDERSTAND ALL SET-UP AND USE INSTRUCTIONS PRIOR TO USE.
2. ALWAYS FLOAT BAG AND ROPE WITH A BOUY.
3. ALWAYS WEAR A LIFE JACKET WHEN BOATING AND ANCHORING
4. DISCONTINUE USE OF THIS PRODUCT IF IT SHOWS DAMAGE OR WEAR.
5. INJURY OR DEATH MAY RESULT IF THIS PRODUCT IS USED IMPROPERLY
6. USE THIS PRODUCT AT YOUR OWN RISK.
7. SEEK INSTRUCTION FOR SAFE ANCHORING METHOD, PRIOR TO ANCHORING YOUR BOAT IN MOVING WATER.